



Warmbier Germany, Electrostatic Field Meter EFM51

Warmbier P/N: 7100.EFM51

- Handheld, portable, digital electrostatic field meter with rotating chopper
- Detects and accurately measures electrostatic fields
- Measures: fields, potentials and discharge time
- Automatic field to voltage conversion according to selected distance
- Very stable zero adjust

Technical data:

- Power supply: 9V battery IEC6F22 or rechargeable battery
- Range: 0 - 160 kV / 0 - 800 kV/m
- Display: 2 row LCD-display
- Dimension: 70 x 122 x 26 mm (W x L x H)
- Weight: 130 g (without battery)



Supplied with:


- 9V battery
- Grounding cable
- Carrying bag
- User Manual
- Calibration certificate

Distance:	Range:	Max. resolution
1 cm	0 - 8 kV	1 volt
2 cm	0 - 16 kV	2 volts
5 cm	0 - 40 kV	10 volts
10 cm	0 - 80 kV	10 volts
20 cm	0 - 160 kV	20 volts
E-Field mode	0 - 800 kV/m	100V/m
CPS mode	1.000 to 100 volts	0,1 sec.

Wrist Strap Tester

Inde P/N: ISM-498

- Use anywhere to check personnel ESD grounding quickly
- Checks contact resistance between Wrist Strap and skin
- Power Supply: 9V Battery • Grounding Wire: 2.5 meter

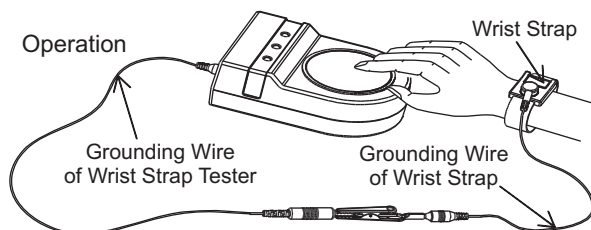

Simply touch circular surface on Tester with your hand and connect ground wire. In case of a safe ground, LED will be 'Green'. Opposite Table summarizes test indications.



LED Indication	Resistance	Buzzer
Power Low (Red)	< 750 KΩ	OFF
Good (Green)	750KΩ ~ 10MΩ	ON
High (Red)	> 10 MΩ	OFF

shown trademarks are property of their respective owners.

While the information contained herein in, has been carefully compiled to the best of our knowledge, nothing is intended as representation and warranty on our part; and no statement shall be construed as recommendation to infringe any of existing patents. We accept no liability of whatsoever for any faults and errors in the information contained herein. Contents of this catalogue and specifications of the products, are subject to change without notice due to continuous improvements.

Replacing the Battery

Replace the 9V battery when "Low Battery" appears on the display. Please switch off the unit before opening the battery compartment. Remove the battery and carefully disconnect the contact-clip. Plug the contact-clip onto the new battery and put it back into the compartment; then close the compartment.


Warning

The unit is not approved for usage in explosive areas!
The usage in power plants is not allowed!
This unit cannot measure alternating fields > 1 Hz!
The Instrument must be grounded when high electrostatic charges are present.
Sparking on the modular system can cause damage to the unit and need to be avoided.

The EFM51 includes:

- Electro Field Meter EFM 51 including the 9V battery and 2 cm distance guides
- Storage Bag including grounding cable and clip
- User's manual in German and English
- Calibration Certificate

Legend

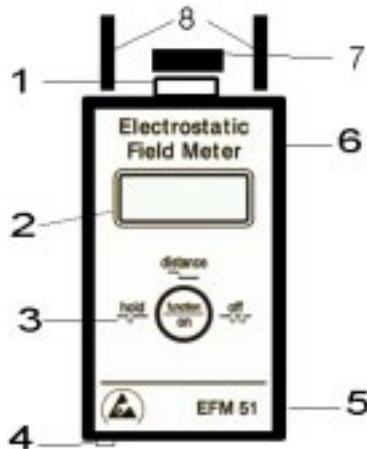

1. Rotating chopper
2. LCD – Display (2 x 12) alphanumeric
3. Function/on key
4. Grounding Socket (4mm)
5. Battery compartment (back-side)
6. Zero adjustment trimmer
7. Protection cap
8. Distance guides (removable for E-Field mode)

Electrostatic Field Meter - EFM 51

V0805



Small hand-held Electrostatic Field Meter with digital display designed to measure electrostatic charges and fields according to the field mill induction principle.

- The instrument measures the electrostatic voltage potential. A microcontroller calculates the field strength (V/m) with the pre-selected distance (1cm, 5cm, 10cm and 20cm).
- In "E-Field meter" mode, the instrument displays the field strength in "kV/m"

Measurement Principle

The induced charge caused by the electrical field, generates a current proportional to the electrical field strength. The selective, parametric operating-amplifier measures the current without affecting the averaged time. There are no radioactive components inside the unit.

Technical Data

Dimensions:	70 x 122 x 26 mm (B x L x H)		
Weight:	130 g (without battery)		
Power Supply:	9V – Alkaline battery IEC 6F22 or rechargeable NiMH battery		
Measurement Range:	distance 1 cm →	0..... 8 kV	max. resolution 1 V
	Distance 2 cm →	0..... 16 kV	max. resolution 2 V
	Distance 5 cm →	0..... 40 kV	max. resolution 10 V
	Distance 10 cm →	0... 80 kV	max. resolution 10 V
	Distance 20 cm →	0... 160 kV	max. resolution 20 V
E-Field meter	→	0... 800 kV/m	max. resolution 0,1 kV/m
Display:	2 lines, 12 digits alphanumeric LCD display		
Operating Time:	app. 10 hours at continuous operation with an Alkaline battery		
Adjustment:	Within a plate capacitor's homogeneous field, plate size 200 mm x 200 mm, distance between both plates is 20 mm, the rotating chopper system is centered in the grounded plate.		

Warranty

We provide 12 months limited warranty.

The warranty does not include the battery, mechanical damage or unauthorized opening of the instrument.

Operating instructions

Operation

- Press the „function/on“ key “shortly” to switch on the instrument
- Press the key twice while in measuring mode to switch off the instrument
- Remove the protection cap before a measurement
- The unit will switch off automatically when the „function/on“ key was not pressed for app. 4 minutes (in CPS-Mode app. 18 min.)

Hold Function

The hold-function freezes the display with the actual measured value.

- Press the „function/on“ key “shortly” while in measuring mode for “hold”.
- Press the key while in “hold” to return to measuring mode.

Measuring Ranges

1. Measurement of electrostatic voltages:
The instrument is preset to 2cm distance after switching on. To measure, it must be positioned at 2 cm distance in front of the object. For high voltages or uneven surfaces the measuring distance should be increased.
2. E-Field meter mode
The instrument indicates the field strength in V/m for the current position.

Measuring Distance / Measuring mode

Press and hold the „function/on“-key (approximately 2 seconds) until „change cm“ will appear. The pre-selected distance in cm is displayed in the first line. Pressing the „function/on“-key changes the measuring distance.

2cm => 5cm => 10cm => 20cm => E-Field meter => CPS-Mode => 1cm

After selecting the desired distance or mode, the instrument switches back to measuring mode if no key is pressed for a certain time.

Important!

The measuring range is preset to 2cm distance each time the instrument is switched on!

The instrument measures the field strength in V/m and calculates the voltage using the selected range:

Display value (V) = Field strength (V/m) x Distance (m)

i.e.. Display value= 1000V Distance= 10cm → 1000V = 10000 V/m x 0,1m

In “E-Field meter” mode the instrument displays the field strength in “kV/m”.

Distance guides

The instrument is supplied with two 2cm distance guides which are fitted on the front plate.

The alphanumeric Liquid Crystal Display (LCD) consists of 2 lines of 12 digits each. The measured distance in cm or the measuring mode is displayed in the first line, while the test result is displayed in the second line. An „overflow !“ indication requires to increase the distance.

Battery control

The EFM 51 has a permanent battery-voltage-control. If the battery voltage falls below 7,5 V a „Low Battery“ warning appears and the 9V Battery must be replaced!

In case the battery falls below 7,0 V the instrument switches off with „auto off“ message to avoid total discharge and acid leakage.

Note: Please use Alkaline or Lithium 9V Batteries only!

If rechargeable batteries are preferred, please use a suitable battery charger for charging the battery separately and follow the manufacturer's instructions.

Grounding

The unit must be connected to ground to allow accurate voltage levels and polarity measurements. Use the grounding socket (4) for ground connection. The unit housing is conductive, and the instrument may be grounded through the operator if he is at ground potential.

Zero Adjust

in general , zero adjustment is not necessary. However the trimmer (6) can be used for zero adjust if the instrument does not indicate U=000 or U=00X when the rotating chopper is shielded by the protection cap. The last digit can be ignored, as it is much lower than the specified tolerance.

Maintenance

It is very important not to touch any parts of the rotating chopper. The sensor head must be free of dust and humidity.

If needed, the rotating chopper be cleaned with alcohol and a lint-free tissue, when switched off.

Deforming the rotating chopper will damage the instrument!